

## INTRODUCTION

Your Tocwatch has a highly accurate quartz mechanism, with the added function of RCC – Radio Controlled Clock. The RCC feature automatically synchronises your watch with the UK atomic clock (NPL), every 24 hours, using the UK atomic clock long wave radio signal. This gives you confidence your TocWATCH® always shows accurate time, as well as adjusting for British summer and winter time.

## IMPORTANT! BEFORE YOU START

**To activate your NEW TocWATCH® you must synchronize the watch to the NPL radio signal.**


**To do this simply hold button C for 5 seconds and place close to a window which allows for the best signal reception.**

**If the Watch is too close to electrical appliances such as TV's, mobile phones and computers, this may cause undesirable signal interference. A strong signal is normally found close to the window.**

## OPERATING INSTRUCTION



- Press button A to cycle through the watch functions.

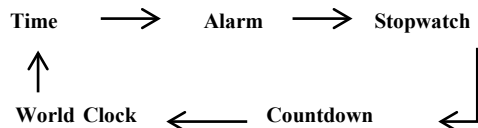

### SETTING YOUR LOCAL TIME ZONE

When displaying the time, hold button B for 3 seconds until the city code flashes, press button D to choose the relative city, confirm selection by pressing button B.

### AUTOMATIC SYNCHRONISATION

- TocWATCH Automatically looks to receive signal at 3:00AM, 4:00AM and 5:00AM every day, If it is successfully receives signal in previous attempt further attempts will be stopped.
- If no signal is received after 3 attempts TocWATCH will continue to display the time via its quartz processor.
- A manual synchronisation will be required.

### MANUAL SYNCHRONISATION

- When displaying the time, hold button C for 5 seconds, "REC" will appear and the following symbol "⚡" will begin flash.
- Place the watch close to a window and away from electrical equipment.


- This Symbol "⚡" means strong signal is being received.
- Synchronisation can take as long as 4 minutes. Once synchronisation has been successful the tower symbol; "⚡" will be displayed at the top right.
- If synchronisation fails, relocate the watch and try again.

### CHECK SYNCHRONISATION

The tower symbol "⚡" will be displayed at the top right of on the LCD screen if synchronisation was successful. Press button C once to view the time and date of the latest synchronisation ("GET" will be displayed along with the date and time of latest synchronisation).

### MANUALLY SETTING THE TIME AND DATE

- When displaying the time hold down button B until the city code starts to flash
- Press button A to cycle through the setting sequence as shown below

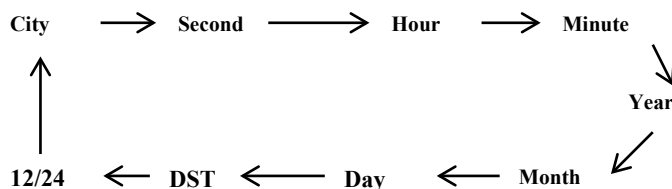

- Pressing button D adjusts the flashing selection
- Press button B button to exit

### DAYLIGHT SAVING TIME (DST)

- Daylight Saving Time automatically advances the time setting by one hour.
- The DST indicator appears on the display to indicate that daylight saving time is turned on. You can make separate settings for each city code.
- You can select the standard time or the DST time manually.

### DST TIME SETTING

- When displaying the time, hold down button B until the City Code start to flash.
- Press button A until DST is selected
- Press button D to Switch DST between Auto / on or off.
- Press B button to confirm and return to the current time.

### ALARM MODE SELECT

- When displaying ALM, press button C to turn on your set Alarm
- Press button D to turn on/off hourly indicator and again to activate / deactivate the snooze function.

"●))" display Indicates alarm is ON.  
 "SNZ" display Indicates snooze alarm is ON.  
 "🔔" display Indicates Hourly chime is ON.

### SETTING THE ALARM

- When displaying ALM, hold button B until the hour digits of the alarm time start to flash, press D to increase the alarm time (press C to reduce it).
- Press button A button to cycle between the hour and minute
- Confirm by pressing button B and exit the setting mode.

### ALARM RING

- In any mode, the alarm will ring for 20 seconds, If SNZ is on, the device will alarm again 5 minute later and it will continue repeated 5 times unless we release it.
- When the alarm rings, the indicator of alarm switch will flash on the screen.
- When at the snooze five-minute intervals, the indicator of snooze symbol will flash on the screen.

### STOPWATCH

- The Stopwatch will run up to 24 hours and then restart to 0
- To operate Press button A until STW is shown on screen.
- Press button D to Start / Stop
- Press button C to restart.

### COUNTDOWN TIMER

- When displaying TMR, Press button D once to start countdown.
- Press button D again to stop it.
- And then press C to restart

### COUNTDOWN TIME SETTING

- When displaying TMR, hold button B until the countdown appears and starts to flash.
- Press the button D button set the countdown hour and minute. Press A and cycle between hour and minute.
- Press the B button once to save the setting and return to the countdown mode screen. Now press button D to start the countdown.
- Press button D to stop and start countdown record.
- To completely stop a countdown operation, first pause it (by pressing D), and then press C, thus returning the countdown time to its starting mode.


### WORLD TIME

- When displaying a secondary time zone your primary time zone will be displayed at the bottom of the LCD .
- If time of your secondary zone is not correct, please make sure the home city is correct before adjusting time.

### TO TURN ON THE BACKLIGHT

In any mode, press button B to illuminate the display for 7 seconds.

### LOW POWER DETECTION FUNCTION

When low voltage symbol () is flashing on screen, it indicates that the battery needs to be replaced

### SPECIFICATIONS

- 1 x CR2032, button cell battery, 3V
- 30 Meters water resistant

### CARING FOR YOUR WATCH

- DO NOT operate the crown or buttons in water or when the watch is wet.
- To prolong the appearance of your watch, avoid contact with the following :Perfumes, hairspray, cosmetics, detergents, adhesives and paints as they cause discoloration, deterioration and damage.
- To help prevent possible damage from perspiration, dust and moisture, periodically wipe your watch with a soft dry cloth.

### WARRANTY

Business Image Limited warrants this product to be free from defects in design, materials and workmanship at the time of its original purchase for a period of one year.

If, during the warranty period, this product fails to operate under normal use and service, due to defects in design, materials or workmanship, Business Image Limited will, at their option, either repair or replace the product.

This does not affect your statutory rights.

TocWATCH® is a registered trademark of Business Image Limited

### Business Image Limited

The Office Building  
Crawley  
West Sussex  
RH10 9RZ

Tel : 01293 449819

E-mail : Sales@businessimage.co.uk

